



Quick Guide for the Sauna Stove V1.0:

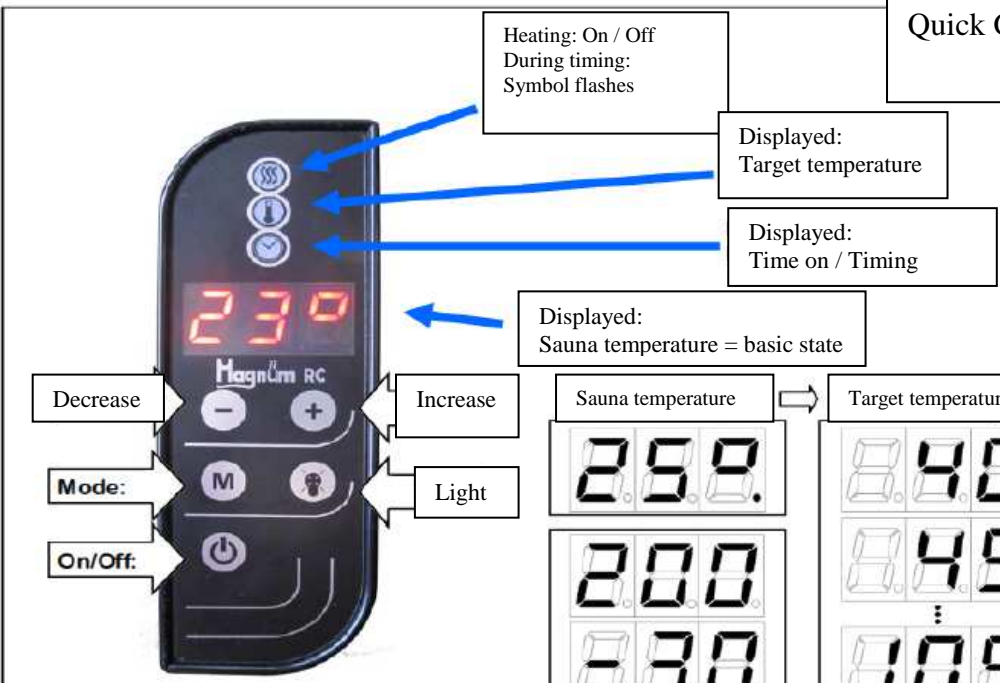

In the basic state when the sauna stove is not on; you can change the target temperature using the '+' and '-' buttons. After 10 seconds the device returns to the basic state or when pressing the Mode button.

When the sauna stove is on, the Basic state and the Time on display alternate at the interval of 10 sec. You can change the target temperature in the Basic state display or by using the Mode button. You cannot change the 'Time on' or timing while the sauna stove is switched on.

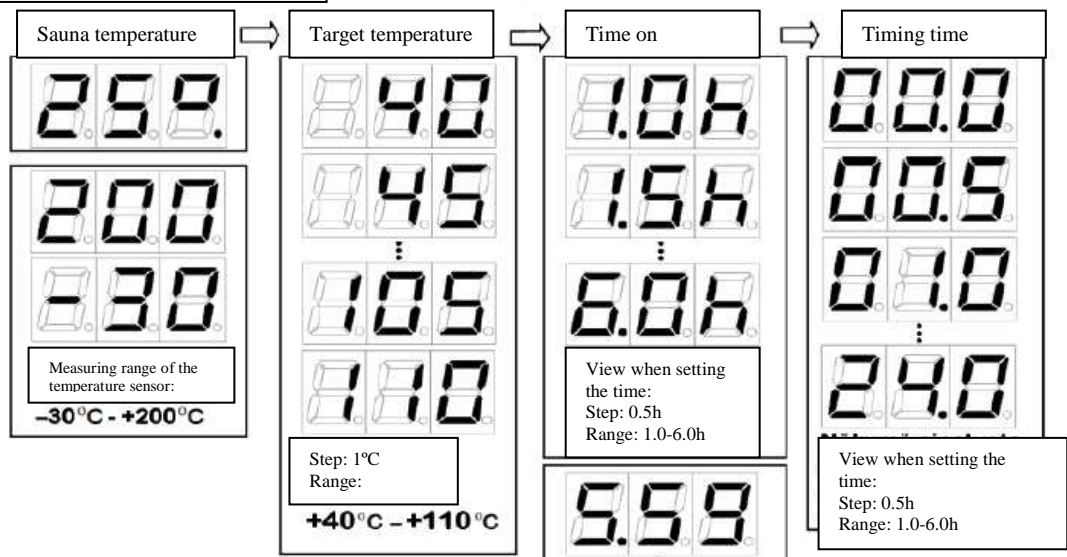

Error situations:

Er1	Temperature sensor missing
Er2	Temperature sensor short-circuited
Pcb	Internal fault, or overheating of controller

The last decimal point indicates that the resistances are on

View when heating: (h.mm)

View during timing:
Time > 10h displayed
Time < 10h displayed